

Hygge H330

Pro Series

Product Name: Hygge H330

Product Number: 600H330

Description

Rechargeable headlamp with 35/330 lumens and red night light in front
Press the on/off 1. 35 lumens. 2. 330 lumens. 3. Off
Press the on/off for 3 sec. to activate red night light.
When the light is on you can always switch it off by pressing the on/off 3. sec.

Specifications

Housing material	ABS Rubber
Lens material	Planoconvex
On/off switch	Rubberised on/off whitch in the top
Battery type	3 x AAA alkaline - included
LED	5 W
Red LED	Yes
Colour temperature (Kelvin)	App. 6500
Colour rendering index (CRI)	>80
Output (lumens)	35 and 330
Run time (hours) down to 10% of full lumens	28h (low beam) / 3.5h (high beam)
Beam distance	60 (high beam) / 16 (low beam)
Adjustable beam - zoom in and out	No
Max charging input	N/A
Charging time (hours)	N/A
Charging indicator	N/A
Battery level indicator	N/A
Charging port	N/A
Cable for charger, 1 m (supplied in box)	N/A
Interchangeable battery	Yes
Protection class	IK07 / IP65
Operating temperature range (Celcius)	-10-40
Headband	Silicone on the inside
Clips for helmet	No
Declaration of conformity	CE and UKCA
Additional info	Can also use rechargeable battery Elwis SKU BAT011.



General Information

Lamp weight (g)	62 g (Incl. batt. 95g)
Lamp dimensions (cm)	6.2 x 5.1 x 3.5
EAN code box (1 pc)	5703296603003
EAN code inner carton = 6 pc.	5703296603010
EAN code outer carton = 6 x inner carton total 36 pc	5703296603027
Harmonized standard code	8513100000

Packaging

Description	FSC cardboard. Gift box with Elwis PRO design
Box dimensions (cm)	12 x 10.5 x 9.8
Box weight (g)	163 g (258 g incl. Product & batt.)
Carton quantity (pcs)	Inner carton 6 pc. / outer carton 36 pc.
Carton size (cm)	(inner carton) / (outer carton)
Carton weight (kg)	(inner carton) / (outer carton)

Features

Extremely durable headlamp.
Equipped with 35 and 330 lumens white light. Up to 28 hours run time on low mode.
Red night light function - keep your own night vision when reading, fishing, walking etc.
Suitable for craftsmen, tent/outdoor living, tackle fishing and leisure in general.

The following Safety Instructions apply (Where relevant)

General Safety Instructions

Do not shine in eyes. Do not immerse in water or other liquids. Do not cover the lens when turned on and do not place the product with the lens/light source direct on a surface. Do not operate if the housing, wiring compartment or lens is open, missing, or damaged. Allow the product to cool down sufficiently before cleaning. Do not use cleaners that contain abrasives or solvents. Use on flat, stable surfaces. Do not operate with wet hands. Do not disassemble. Do not attempt to repair if damaged. Repairs must only be carried out by the manufacturer or authorized service representative. Clean with a dry clean cloth. Please note that lighting products generate heat – if the heat exceeds 60 degrees turn off the product.

Safety instructions - rechargeable products

Always inspect the charging plug - it must look dry, clean and undamaged. Only use the supplied charging cable and/or charger. Do not use a modified or damaged charger. Do not try to charge the product if it looks damaged. Do not turn on when charging. Do not leave on charge for over 24 hours. Do not charge below 0°C, above 40°C or at high humidity. Do not leave the product on charge near flammable material as it can cause a fire. Never charge without supervision. Always pay extremely attention to U-Ion batteries as they can explode. If not handled properly, the battery may cause explosion, leakage or fire. Do not expose batteries to direct sunlight. Do not disassemble or modify batteries. Do not apply strong impacts to the battery. Do not get batteries wet. Keep batteries out of reach of children and animals. Do not place batteries on top of an electromagnetic field. Do not use batteries that work for an extremely short period of time. Do not short-circuit the battery. Do not put a battery in a microwave oven, pressure container, or other such devices. Do not recharge batteries where heat can build up. If not handled properly, the battery may cause explosion, leakage, or fire.

Safety instructions - alkaline batteries

Only use new and undamaged batteries. Remove batteries from a device that is not being used for an extended period as they can leak. Never try to charge a non-rechargeable battery.



Elwis Lighting A/S, Sandtoften 11, 2820 Gentofte, DK
www.elwislighting.com - Tel. +45 70 20 10 24

Version 1 06/2022
© Elwis Lighting 2022
All details without obligation